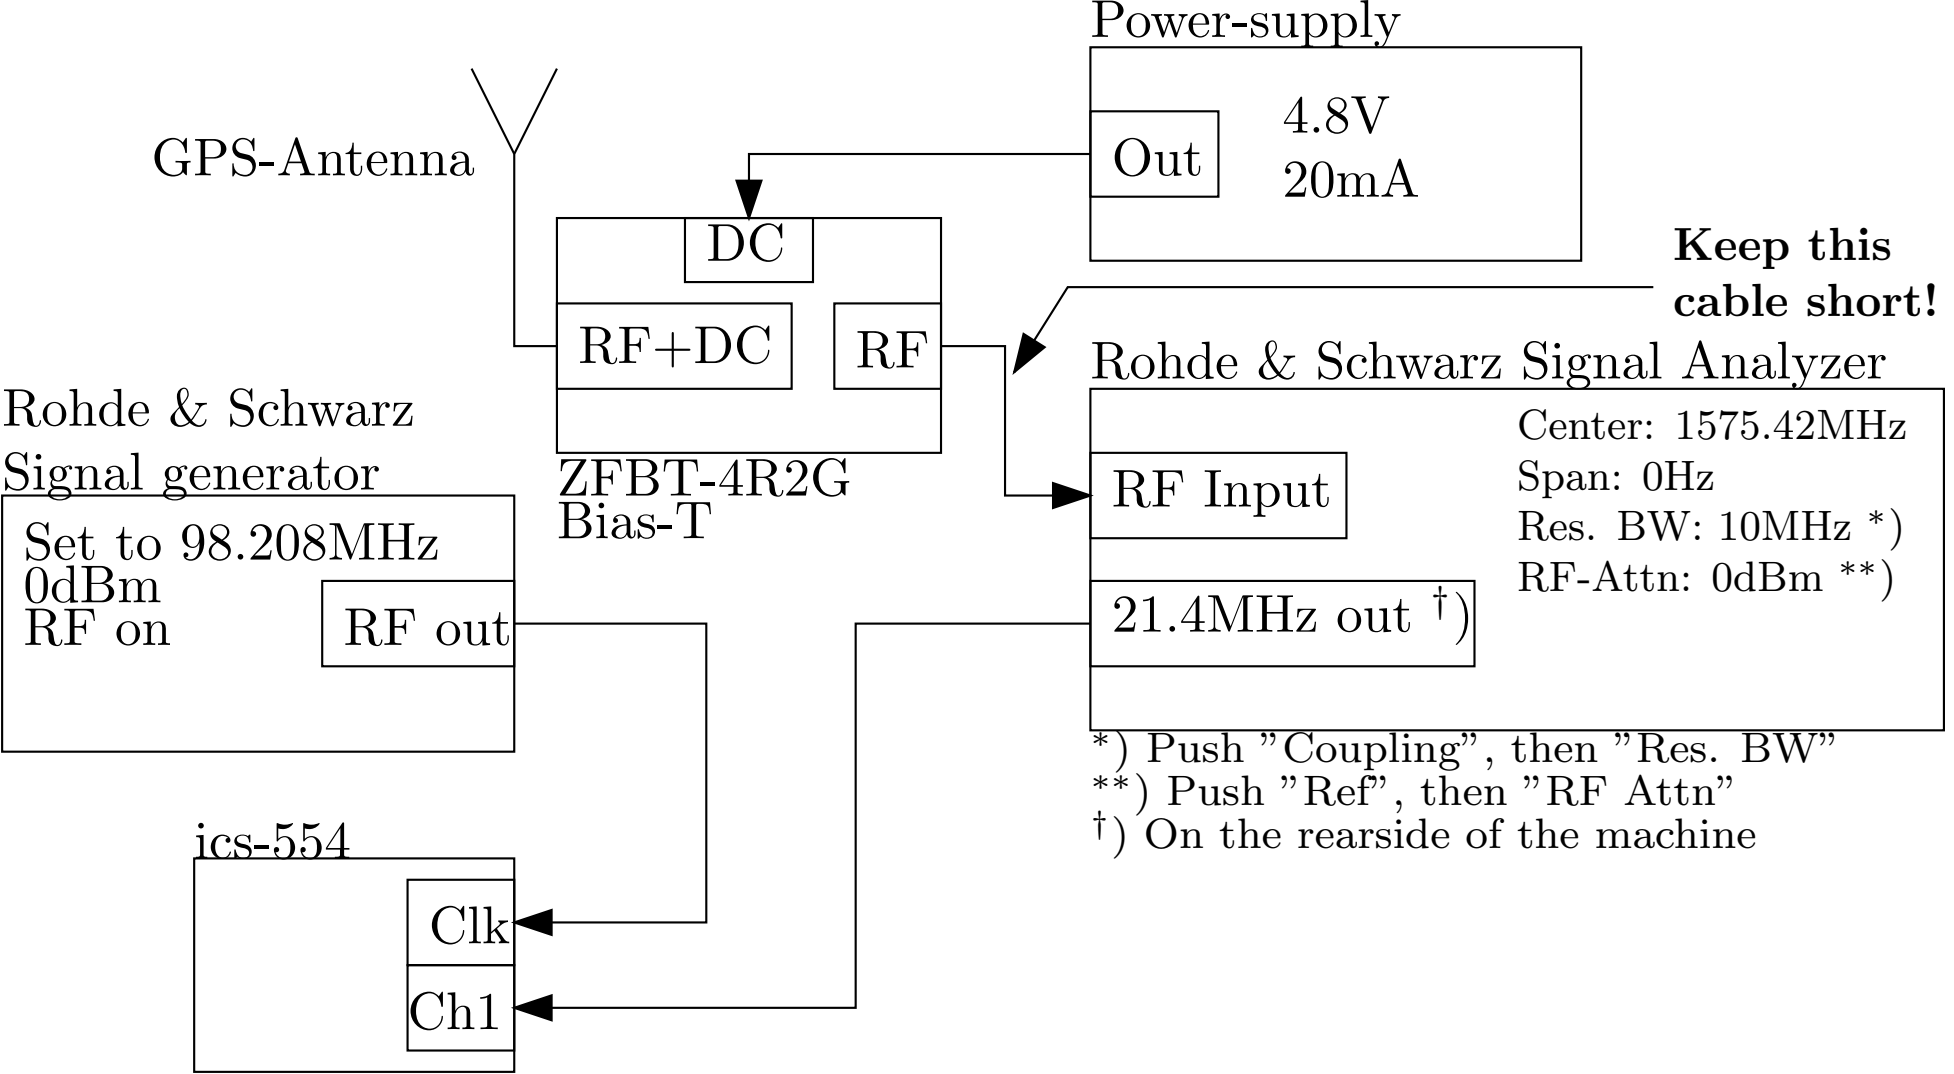

*) Push "Coupling", then "Res. BW"
**) Push "Ref", then "RF Attn"
†) On the rearside of the machine